 




User manual

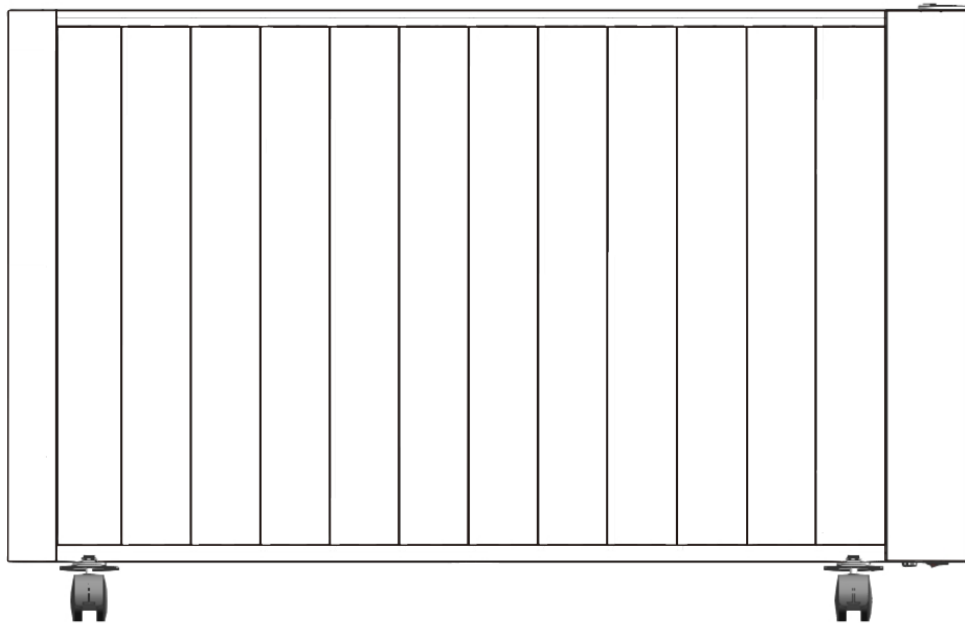

PORTABLE OR MOUNTABLE PANEL HEATER

**EAH20LEDWB
EAH20LEDWW
EAH20LEDWDG**

Thank you for choosing electriQ
Please read the manual before using this heater
and keep it safe for future reference.
Visit our page, www.electriQ.co.uk, for our entire product range.

Welcome to electriQ

We hope you're happy with your new purchase.

We'd love to see how you're getting on.

If you share any snaps on your socials,
make sure you tag us and use our hashtag.



@electriQUK

#electriQUK

We're here to help

Got a question or need help?

Get in touch with our friendly customer service team.



0330 390 3061

support@electriQ.co.uk

Mon - Fri | 9am to 5pm

**Unit 2A, Trident Business Park, Neptune Way,
Leeds Road, Huddersfield, HD2 1UA**

CONTENTS

SAFETY WARNINGS	4
PARTS	6
ATTACHING THE FEET	6
WALL INSTALLATION	7
OPERATION	9
REMOTE CONTROL	10
SETTING UP THE APP	11
CLEANING AND STORAGE	21
TECHNICAL SPECIFICATION	21
TROUBLESHOOTING	21
SUPPORT	22
PRODUCT FICHE	24

SAFETY INSTRUCTIONS

IMPORTANT

- Carefully read the instructions before operating the unit
- This appliance is for indoor use only.
- Rating: This unit must be connected only to a 220-240 V / 50 Hz earthed outlet.
- Installation must be in accordance with the regulations of the country where the unit is used.
- All national regulations concerning the discharge of air must be fulfilled.
- If you have any doubt about the suitability of your electrical supply, have it checked and, if necessary, modified by a qualified electrician.
- This heater has been tested and is safe to use. However, as with any electrical appliance, use it with care.
- Joists, beams and rafters shall not be cut or notched to install the appliance.
- Disconnect the power from the unit before dismantling, assembling or cleaning.
- Avoid touching any moving parts within the appliance.
- Never insert fingers, pencils or any other objects through the guard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position. They have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- Children under 3 years should be kept away unless continuously supervised.
- Children should be supervised to ensure that they do not play with the appliance.
- **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Do not clean the unit by spraying it or immersing it in water.
- Never connect the unit to an electrical outlet using an extension cord. If an outlet is not available, a qualified electrician should install one.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Ensure the power cord is not stretched, exposed to sharp objects or edges, or routed under the unit.
- Do not use this heater in the immediate vicinity of a bath, shower, or swimming pool.
- Do not use this heater if it has been dropped.
- Do not use it if there are visible signs of damage to the heater.
- Always ensure the heater is used on a flat-level surface.
- An authorised service representative should perform any service other than regular cleaning. Failure to comply could result in a voided warranty.
- Never use the plug as a switch to start and turn off the heater. Use the provided power switch on the rear of the unit.
- **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- **WARNING:** In order to avoid overheating, do not cover the heater. Do not cover the air inlet or outlet or place items close to the unit, which may restrict airflow, as this may present a heater risk.
- The heater must not be located immediately below a socket outlet.
- Always ensure the unit is secure before operation. Do not use it on unstable or uneven surfaces, and if it is wall-mounted, it must be securely attached to a suitable wall.
- Do not move or tilt the unit.

 
 
 
 
 
 
- Avoid keeping the unit in direct sunlight for a long period of time.
- The heater is designed to be used at temperatures above -20°C. If it is exposed to temperatures below this, it must be allowed to warm above this level before operation.
- Do not attempt to repair, disassemble or modify the appliance. This unit contains no user-serviceable parts.
- Always unplug or disconnect the appliance from the mains power supply when not in use or when moving or cleaning it. Do not pull the cord to unplug the heater.
- Keep the heater clean. Do not allow any object to enter the ventilation or exhaust opening, as this may cause electric shock or damage to the heater.
- Do not use the appliance for anything other than its intended use. It is designed for domestic indoor use only.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own unless constant supervision is provided.
- **WARNING:** To reduce the risk of the heater, keep textiles, curtains, or any other flammable material at least 1 m from the air outlet.
- There may be a trace of odour during the first few minutes of initial use or after a period of storage. This is normal and will quickly disappear.
- This appliance has hot and arcing or sparking parts inside. Please do not use it in areas where gasoline, paint, or any flammable liquids are used or stored.
- This appliance is not intended for use in bathrooms, laundry areas, or similar humid locations. Never place it where it may fall into a bathtub or otherwise become exposed to water.
- If the unit is wall-mounted, it must be installed in accordance with current regulations for the area where it is installed. If unsure, professional advice should be sought.
- **WARNING:** To reduce the risk of heater or electrical shock, DO NOT use this appliance with any solid-state Speed Control Device or any variable speed controllers.
- **Always ensure the heater is turned off before leaving it unattended.**

ENERGY SAVING AND UNIT SAFETY PROTECTION TIP

- Do not cover or restrict the airflow. Please do not use it in a dusty environment.
- For safety and maximum performance, when used as a portable unit, the minimum distance from a wall or objects should be 50cm.

PARTS

NOTE: This heater is designed to be mounted vertically on a suitable wall. The fittings provided are for a solid masonry wall; you must purchase separate fittings if your wall differs. We highly recommend having the panel heater installed by a qualified electrician or installer.

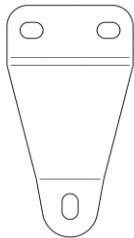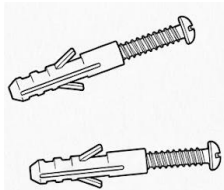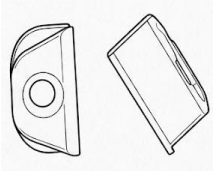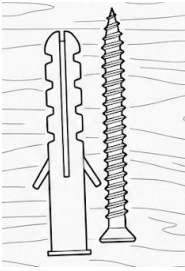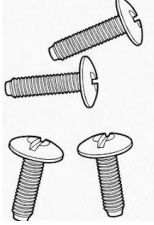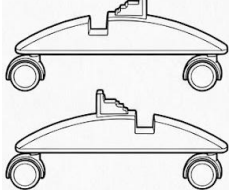NO.	PART	IMAGE	QTY
A	Hangers		1
B	Wall plug and screws		2
C	Hook		2
D	Wall plug and screws		1
E	Screws		2
F	Screws		4
/	Feet		2

ATTACHING THE FEET

1. Rest the heater upside down on a soft cotton cloth or carpet.
2. Fix the feet to the base of the heater using the four screws provided.
3. Line up the holes in the base with the holes in the feet, and secure the feet to the heater using the four screws (F). Insert each screw through the aligned fixing holes and tighten evenly using a suitable screwdriver.

NOTE: This product must be used on the floor with the feet firmly attached.

 


WALL INSTALLATION


IMPORTANT: Do not install the heater in a bathroom, steam room or any place where it is consistently exposed to water.

IMPORTANT: Ensure the appliance is completely disconnected from the power supply. The plug must not be connected at any time during installation. Installation must only be carried out on a wall capable of safely supporting the full weight of the heater.


1. Measure the distance between the two mounting points located on the upper rear of the panel heater. Transfer these measurements onto the wall and mark the positions with a pencil. Use a spirit level to ensure both marking points are perfectly level.

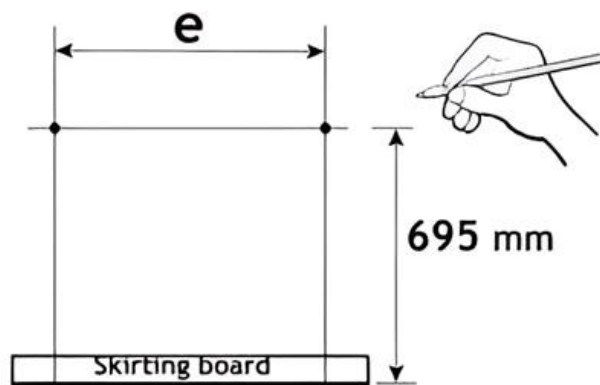


 2. Drill two holes at the marked positions with a diameter of 10 mm and a depth of 60 mm. Insert the wall plugs supplied in (B) into the drilled holes, ensuring they are flush with the wall surface. Secure the two hooks (C) to the wall using the screws (B) by inserting the screws through the hooks' mounting holes and tightening them securely.

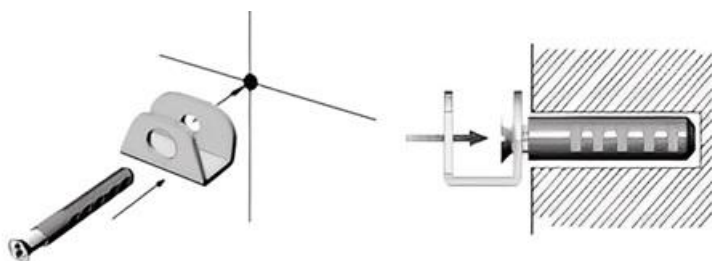



3. Attach the hanger (A) to the lower rear section of the panel heater using the two screws (E). Ensure that the hanger is firmly secured before proceeding.

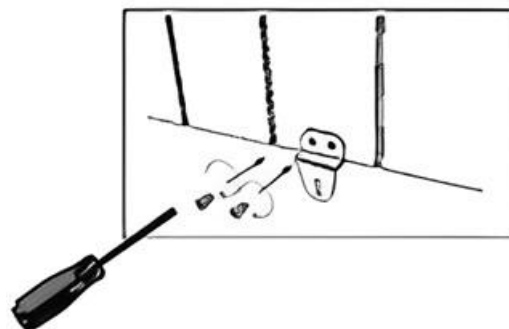 

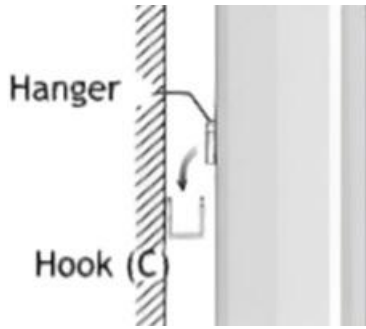 

4. Carefully lift the heater and hang it onto the two hooks (C). Once the heater is correctly positioned, mark the screw hole location where the hanger (A) will be fixed to the wall.

 
 
5. At the marked location, drill a hole with a diameter of 4 mm and a depth of 25 mm.

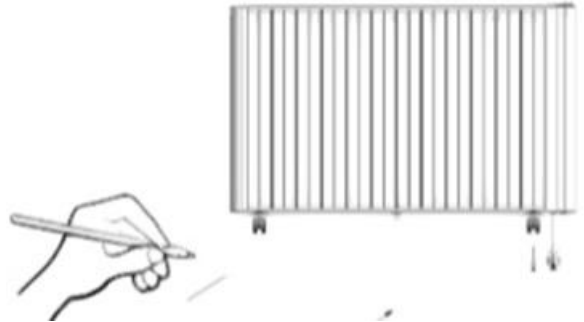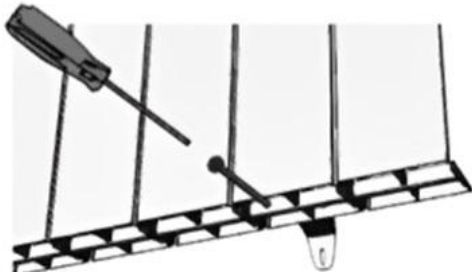

6. Secure the hanger (Part A) to the wall using the wall plug and screw (D). Ensure that the hanger is firmly fixed to prevent the heater from being lifted off the hooks.

7. Ensure the heater is level and that all screws are fully tightened. After installation, visually inspect the appliance for stability and correct mounting, then confirm safe installation before first use.

  OPERATION

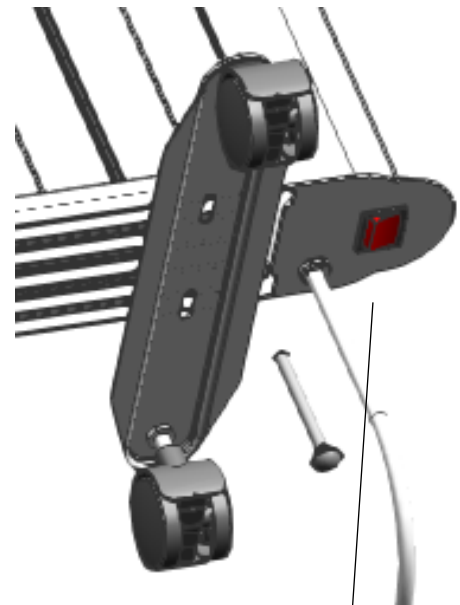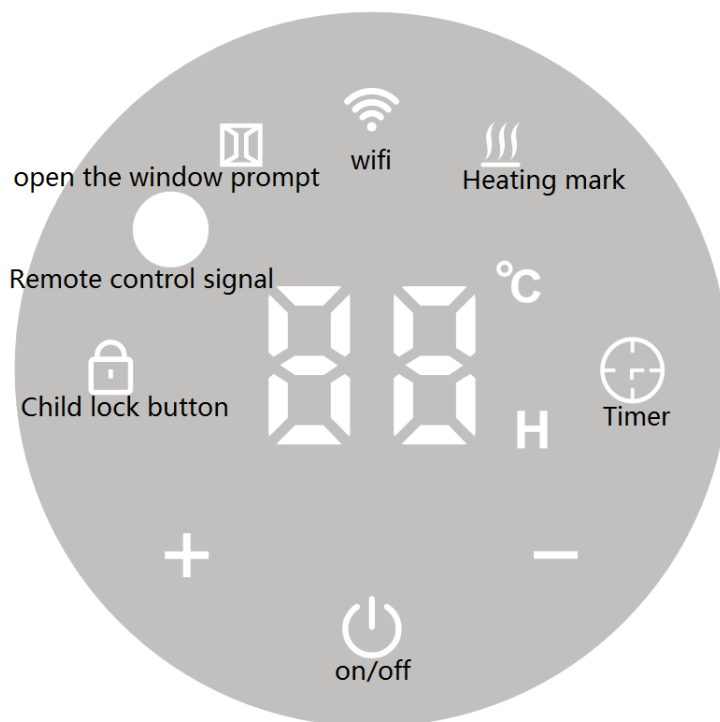


ON / OFF switch

FUNCTION	DESCRIPTION
Power	Press the ON/OFF switch to turn it on and off. When turned on, the display will light up with the current temperature of the room.
Temperature Selection	Use the increase and decrease buttons to change the desired temperature in 1-degree increments. The range can be set from 5-40°C. The display will show your selection and return to the current temperature after a few seconds of inactivity. When the target temperature has been exceeded by 2 degrees, the heater will turn off.
Timer	Press the Timer button until the display begins to blink. Press the Timer button repeatedly to set the timer to turn the unit off within 1 to 24 hours. The selected time will flash for a few seconds before the display returns to showing the current temperature. The "H" icon will remain illuminated while the timer is active.
Child Lock	Hold the Child Lock button for 2 seconds, and the control panel will lock; repeat to unlock. The lock will light up when it is locked.

NOTE: The heater will beep with each selection

 REMOTE CONTROL

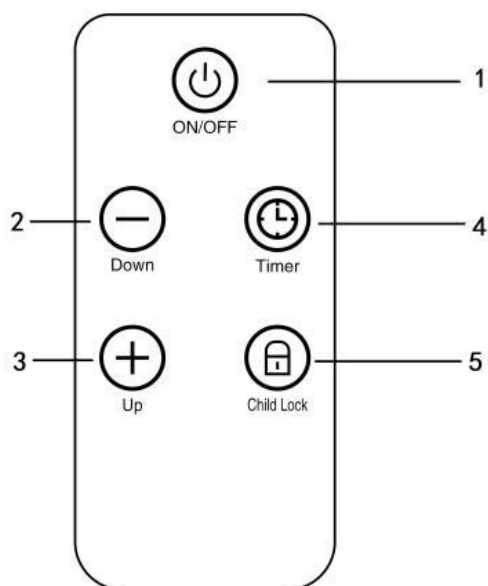

NO.	FUNCTION	DESCRIPTION
1	Power	Press the Power button to turn it on and off.
2	Down	Press the Down button to decrease the temperature from 40°C to 5°C.
3	Up	Press the Up button to increase the temperature from 5°C to 40°C.
4	Timer	Press the Timer button, then use the timer controls to set the desired operating time from 1 to 24 hours.
5	Child lock	Press the Child Lock button to lock the heater. Press it again to unlock the heater.

 
OPERATING SOUND

The appliance beeps each time a button is pressed, or a setting is changed.

CONNECTING THE APPLIANCE TO WI-FI

DOWNLOAD THE APP TO YOUR PHONE

Download the "TUYA SMART" app, from your chosen app store, using the QR codes below, or by searching for the app in your chosen store.

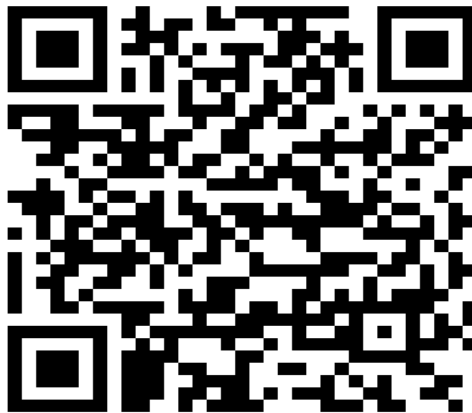

Android



IOS

MODES AVAILABLE FOR SETUP

The heater has two different setup modes, Quick Connection and AP (Access Point). The quick connection is a quick and simple way to set the unit up. The AP connection uses a direct local Wi-Fi connection between your phone and the heater to upload the network details.

When first turned on using the switch on the rear of the unit, the Wi-Fi will be turned off. To turn on the Wi-Fi, press and hold the **UP** button for 3 seconds. The Wi-Fi symbol will flash quickly to indicate the unit is in quick connection mode. Please ensure your device is in the correct Wi-Fi connection mode for the connection type you are attempting; the flashing Wi-Fi indicator on your heater will indicate this.

CONNECTION

 
After plugging in, the Wi-Fi icon  flashes and automatically enters the distribution network state. After the distribution network is successfully connected. The Wi-Fi indicator light remains on. Press and hold the Wi-Fi button  for 3 seconds to reset Wi-Fi and reconfigure the network.

TURNING THE WI-FI OFF


To turn the Wi-Fi off, the appliance must be turned off using the switch on the rear. When the unit is turned back on it will start with the Wi-Fi turned off, until reactivated following the steps above.

REGISTER THE APP


1. Press on the register button at the bottom of the screen.

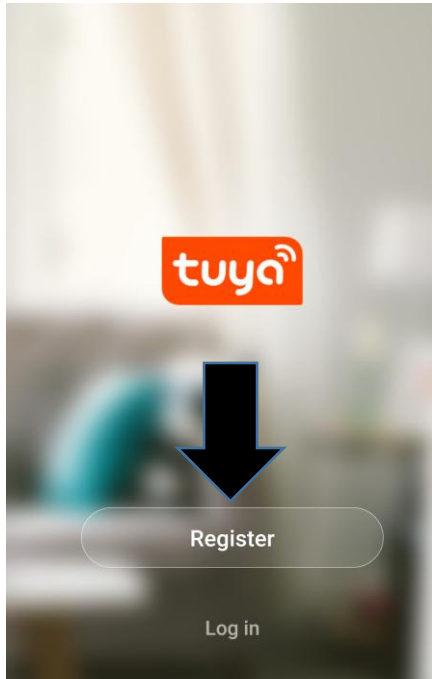

 
2. Read the Privacy policy and press the Agree Button.

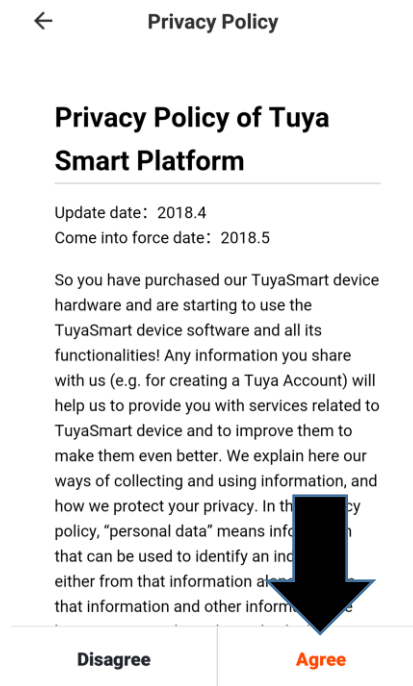

 
3. Enter your email address or phone number and press continue to register.

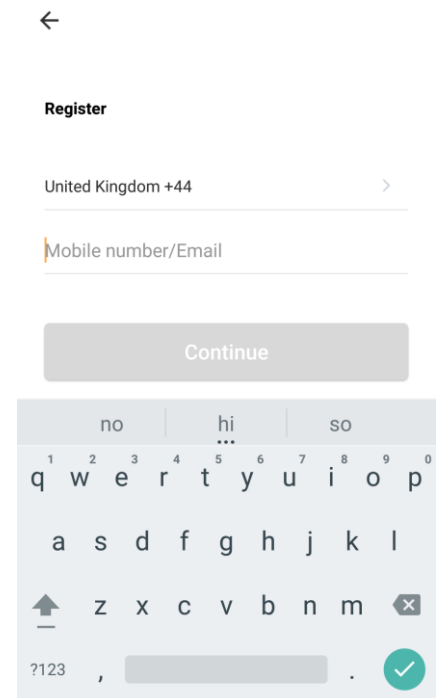

 
4. A verification code will be sent by the method selected in step 3. Enter the code into the app.

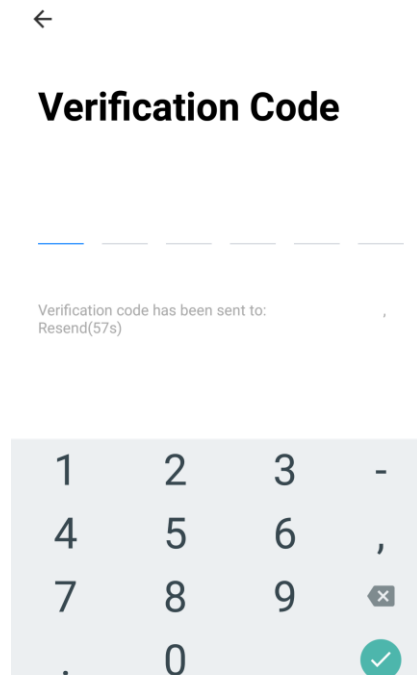

 5. Type in the password you would like to create. This needs to be 6-20 characters, with letters and numbers.

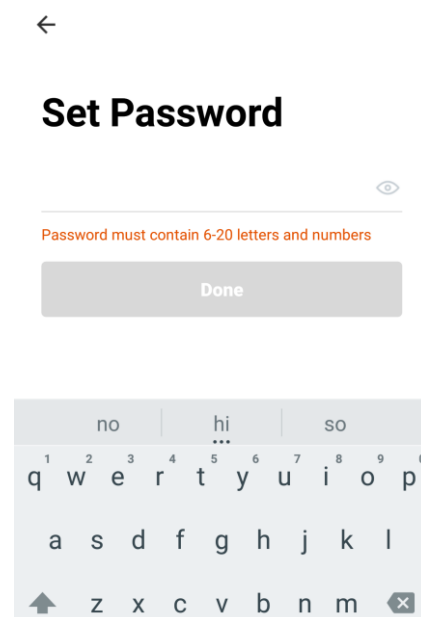

 6. The app is now registered. It will automatically log you in following registration.

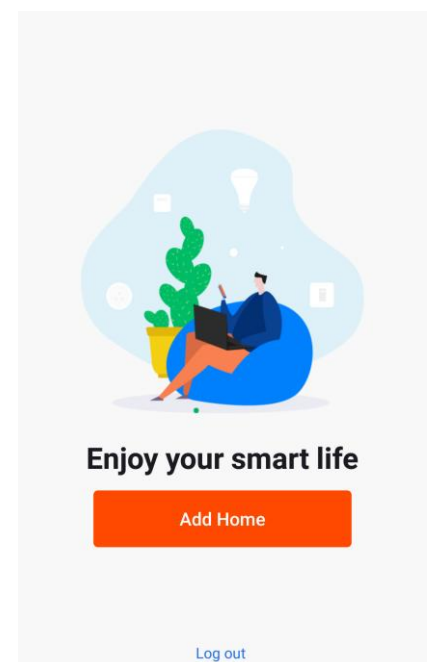


SETTING UP YOUR HOME WITHIN THE APP


TUYA is designed so it can work with a large number of compatible smart devices within your home. It can also be set up to work with multiple devices within different houses. As such, during the setup process, the app requires that different areas be created and named to allow easy management of all your devices. When new devices are added, they are assigned to one of the rooms you have created.

CREATING ROOMS

 1. Press on the ADD HOME button.

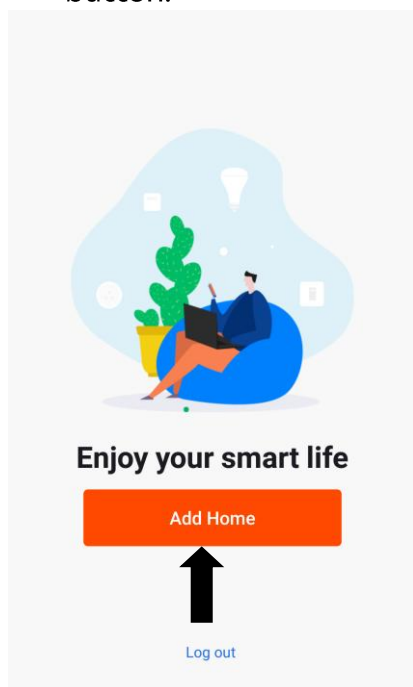

 2. Type in a name for your home.
3. Press on the location button to select the location of your home. (See SETTING YOUR LOCATION below)
4. New rooms can be added by pressing the ADD ANOTHER ROOM option at the bottom. (See ADD ANOTHER ROOM below)
5. Untick any rooms that are not required on the app.
6. Press DONE in the top right corner.

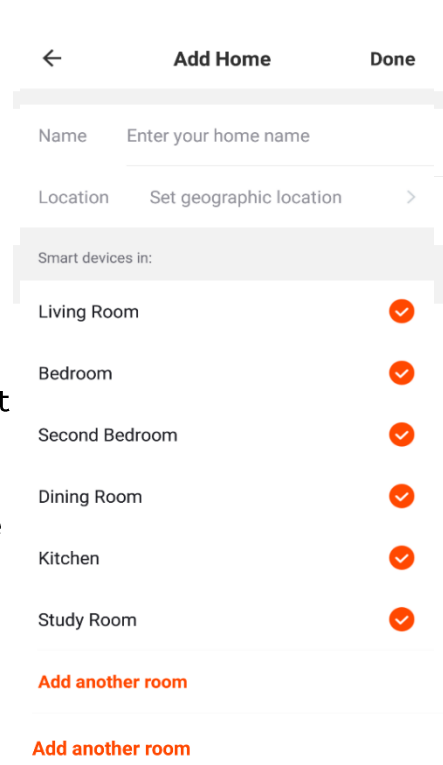


SETTING YOUR LOCATION

Use your finger to move the orange HOME symbol.


When the symbol is in the approximate location of your home, press the confirm button in the top right corner.

 Location details allows the app to be set up later to respond to weather conditions in your area.

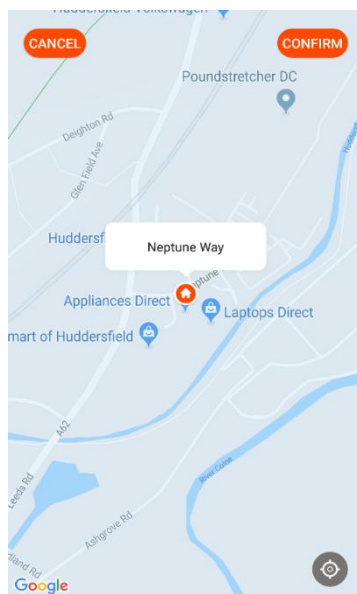

ADD ANOTHER ROOM

 Type in the name of the room, and press Done in the top right corner.

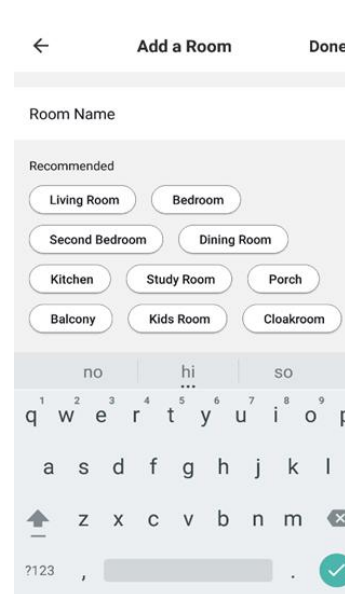

CONNECTING USING THE QUICK CONNECTION METHOD

Before initiating the connection, make sure the unit is in standby mode (Power switch ON, but the unit is turned off) and the Wi-Fi indicator flashes twice per second.

 
If it does not, press and hold the decrease (-) button:

- 3 seconds – enables Quick Connection mode (indicator flashes twice per second).
- About 6 seconds – enables Hotspot Connection mode (indicator flashes slowly).


Also, ensure your phone is connected to your Wi-Fi network.

(We recommend turning off mobile data during setup.)


1. Open app and press “+” to add device, or use the add device button.

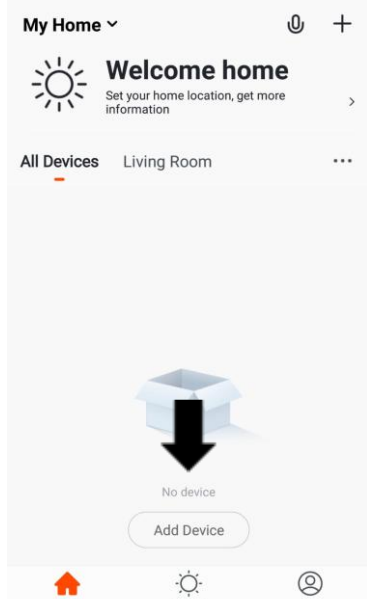

 
2. Select the type of device as “Heater” within the Home Appliance tab.

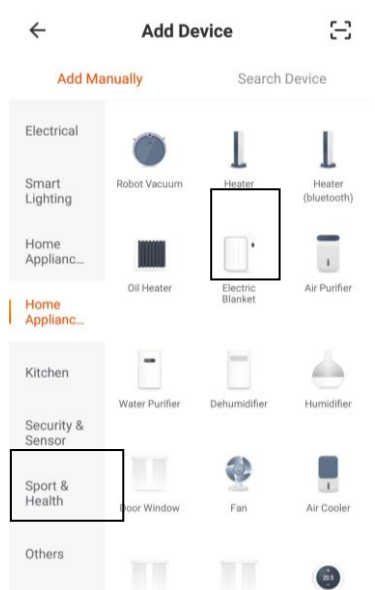

 
3. Ensure the Ambient Light indicator on the heater is flashing twice per second, then press the orange button at the bottom of the screen.

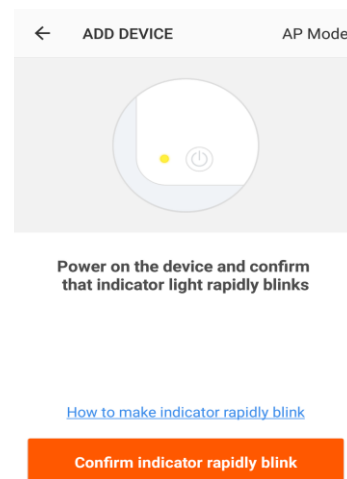

 4. Enter your Wi-Fi password and press confirm.






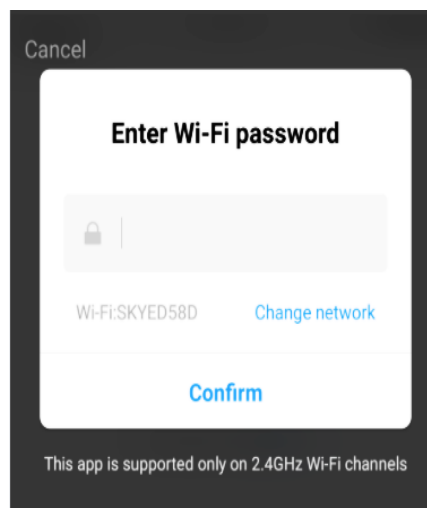


 5. This will then transfer the settings to the heater. Wait for this to complete. If this fails, retry. If still unsuccessful please review the troubleshooting section for further help.

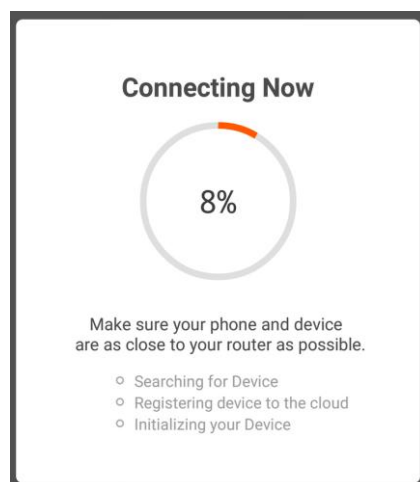

CONNECTING USING THE APP MODE ALTERNATIVE METHOD

      Before initiating the connection, make sure the unit is in standby mode, with the Wi-Fi Light Indicator flashing once per second. If not, follow the instructions for changing the Wi-Fi connection mode. Also, ensure your phone is connected to the Wi-Fi network. (We advise turning mobile data off during setup)

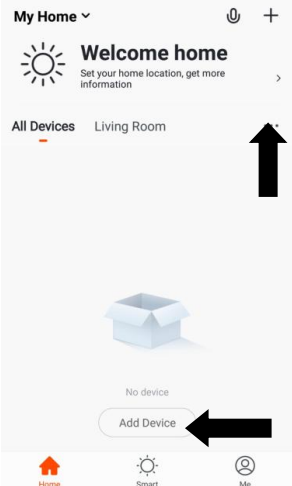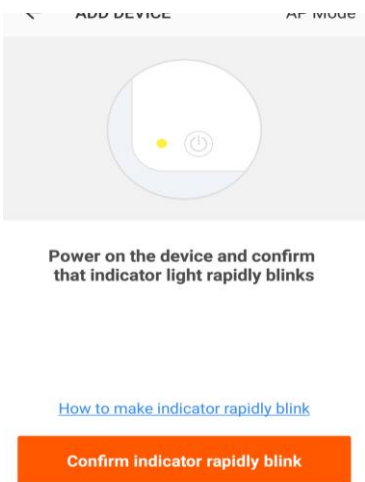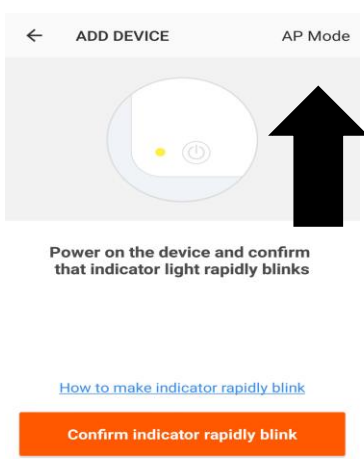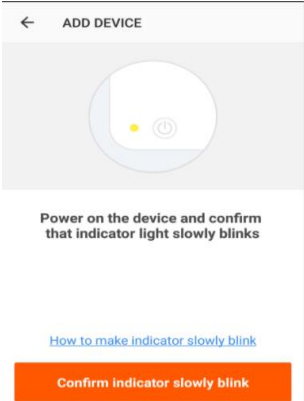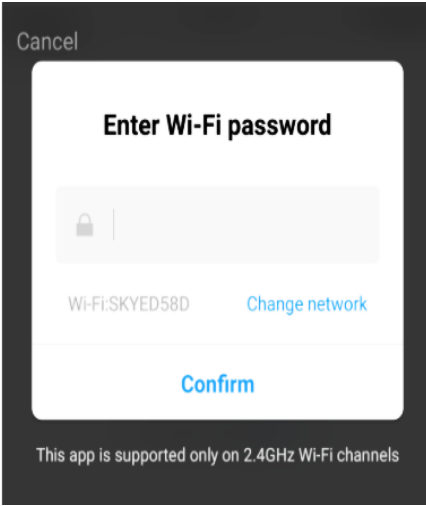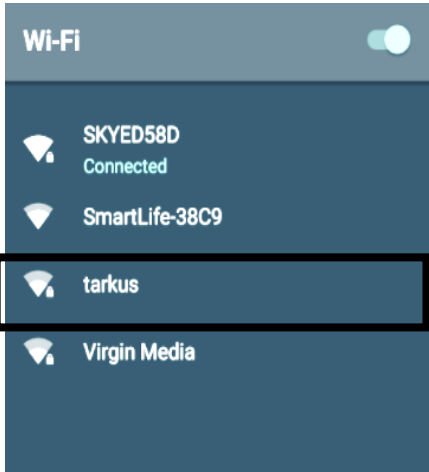1. Open app and press “+” to add device, or use the add device button. 	2. Select the type of device as “Heater” within the Home Appliance tab. 	3. Press on the AP mode button in the top right of the screen. 
4. Ensure the Wi-Fi indicator on the heater is slowly flashing (once per second), then press on the orange button at the bottom of the screen to confirm. 	5. Enter your Wi-Fi password and press confirm. 	6. Go to network settings in your phone and connect to the “SmartLife xxx” connection. There is no password to enter. Then return back to the app to complete setup. 

This will then transfer the settings to the heater.

Once the connection process has completed, go back to the network settings on your phone to ensure your phone has reconnected to your Wi-Fi router.

CONTROLLING YOUR APPLIANCE THROUGH THE APP

 
THE HOME SCREEN

Each device has its own entry on the home screen, which allows the user to quickly turn the unit on or off or to enter the device screen to make other changes.

Voice Control: Press to give verbal instructions for operation.

Add Device: Add a device to the app, and go through the setup process.

Name of Heater: Press to enter the Device Screen.

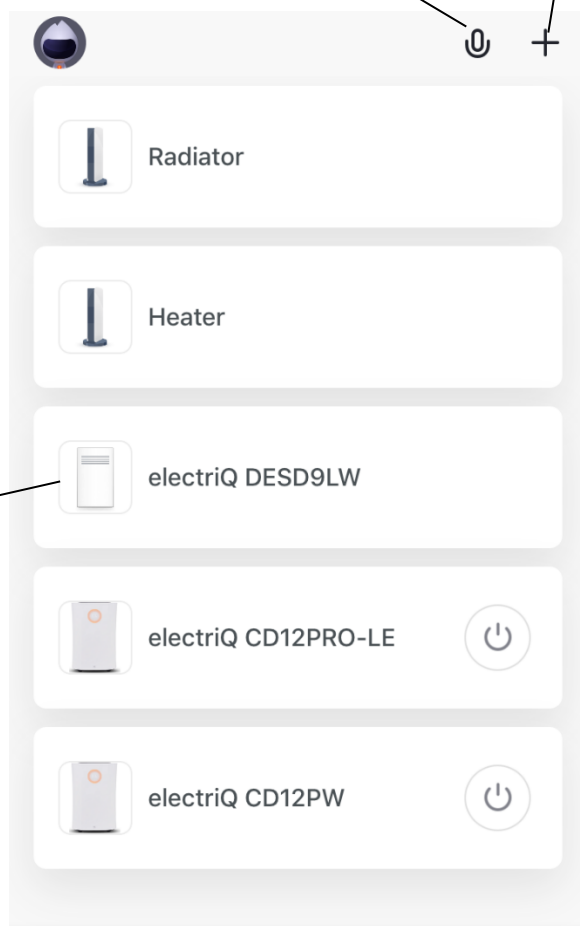

Home: Return to home screen from the Smart Scene and Profile screens.

 
Smart Scene: Allows you to program intelligent behaviour based on the internal and external environment.

Profile: Provides the option for changing settings.

DEVICE SCREEN

The device screen is the main control screen for the heater, providing access to the controls to amend the functions and settings.

NOTE: The app's layout and available features may change due to continuous development

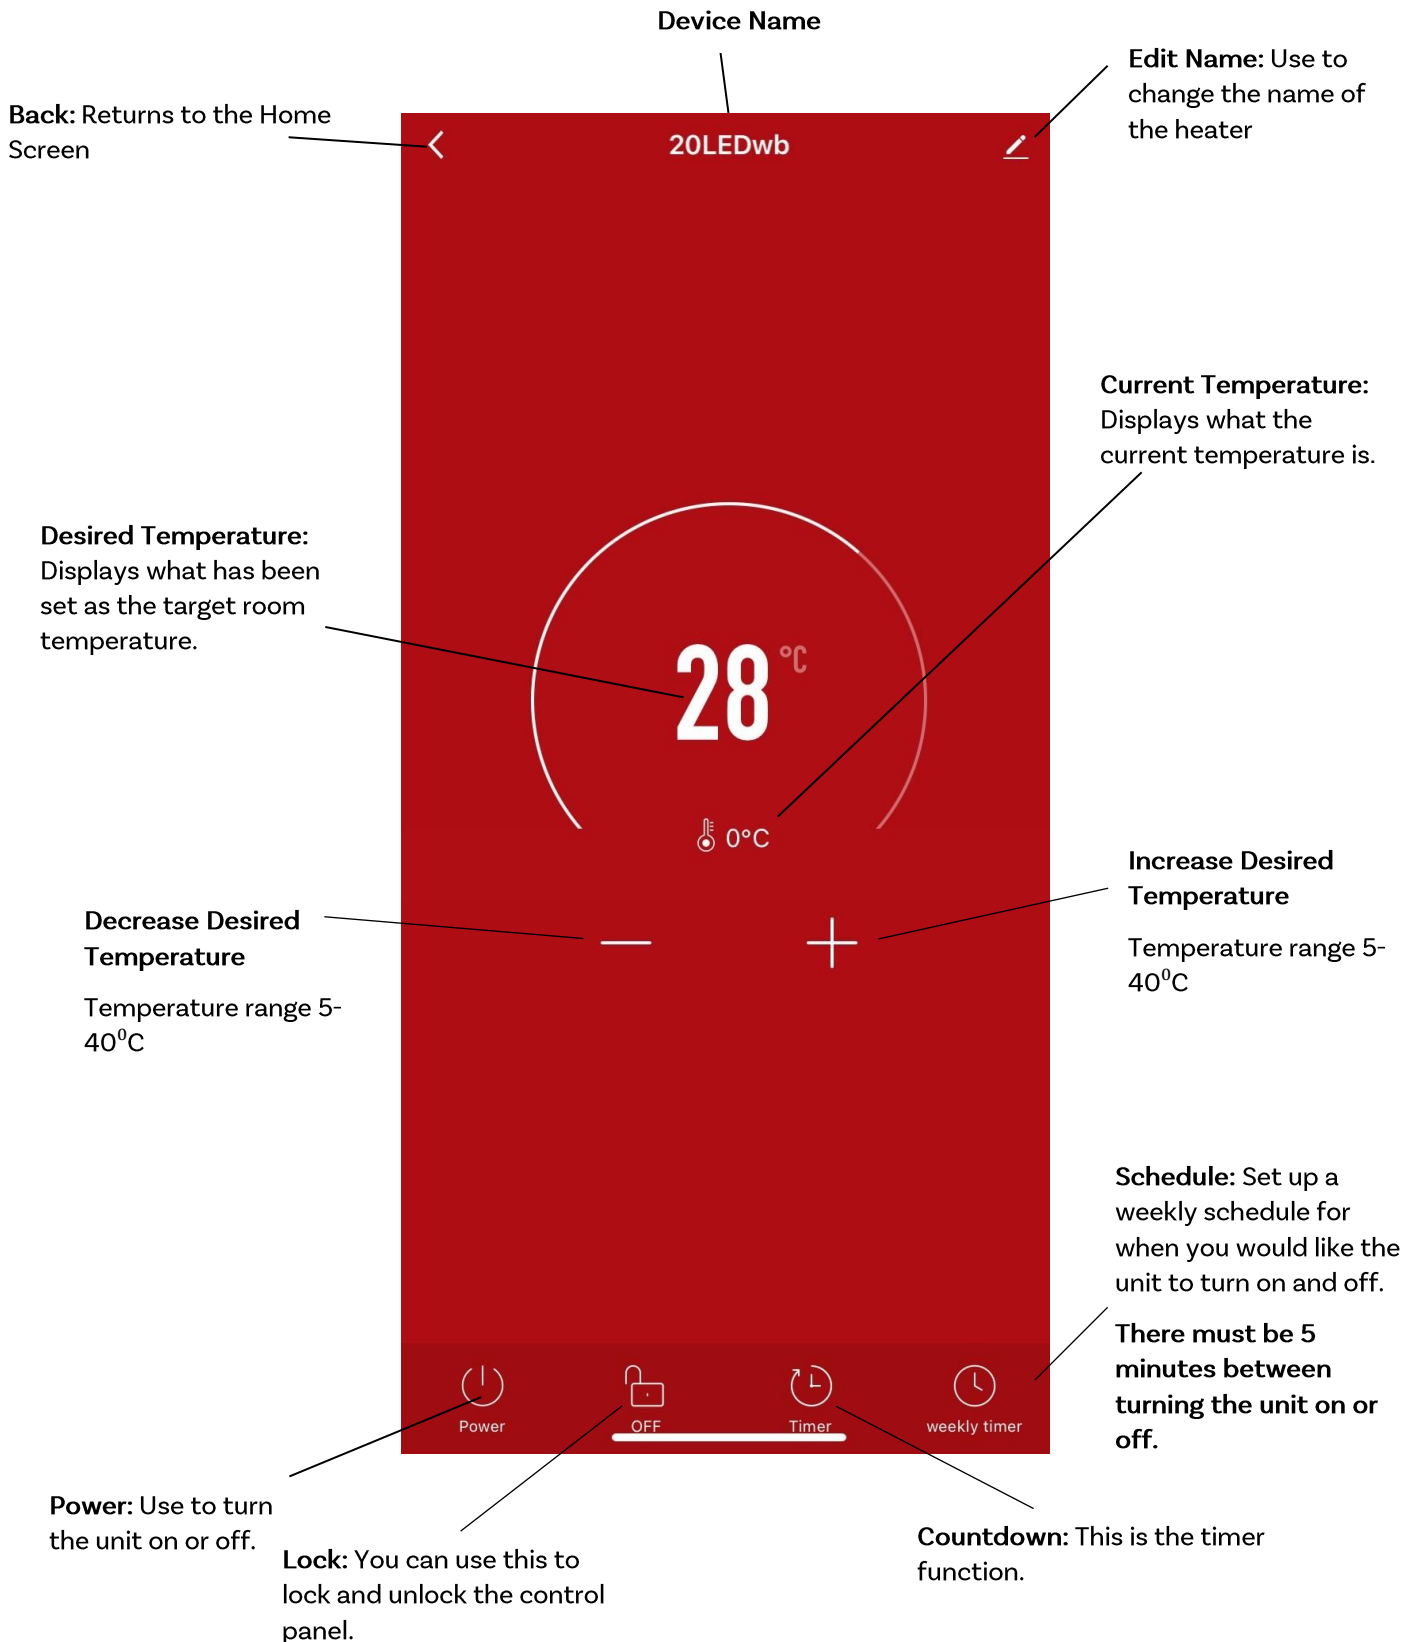





SMART SCENES

Smart Scenes is a powerful tool that allows the user to customise the operation of the air heater based on conditions within the room and outside influences. This gives the user the option of specifying much more intelligent actions. These are split into two categories: Scene and Automation.

SCENE

Scene allows for the addition of a one-touch button to the Home Screen. The button can be used to change several settings in one go and can change all the settings within the unit. A number of scenes can easily be set up, allowing the user to easily change between a number of pre-set configurations.

    
Below is an example of how to set up a scene:

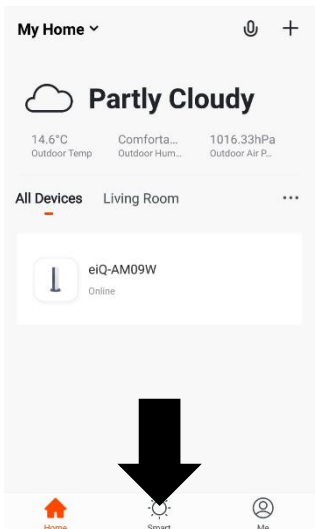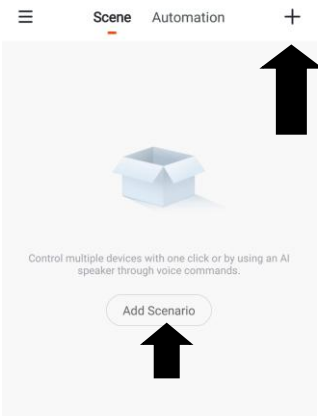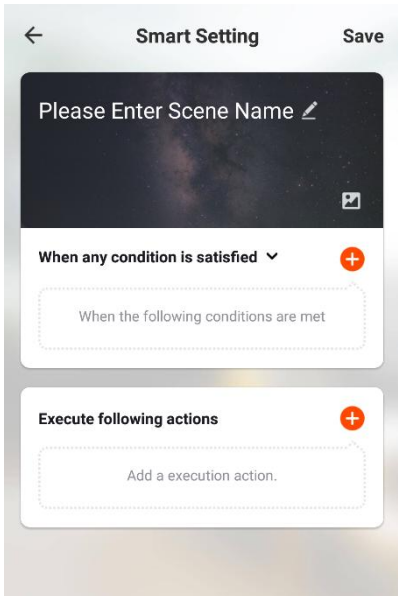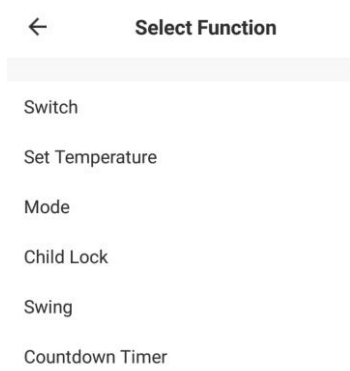1. Press on the Smart tab at the bottom of the Home screen. 	2. Press on the Plus in the top right corner or on Add Scenario to add a smart scene. 
3. Press the Pen next to "Please Enter Scene Name" to input the name for your Scene. Show on Dashboard: Leave this on if you require the scene to be displayed as a button on the Home Screen Press the Red Plus to add the action required. Then select the heater from the list of devices. 	4. Choose the function, set the value for the function, and then press the back button in the top right corner, to return to the previous screen. 
5. Once all the functions required have been added, press the Save button in the top right corner to finalize and save your new Scene. It will then be saved to the home screen.	


AUTOMATION

Automation allows an automatic action to be set up for the device. This can be triggered by the Time and a range of other influences, depending on what other TUYA-enabled devices you have on the network.


 
1. Press on the Scene tab at the bottom of the Home screen.

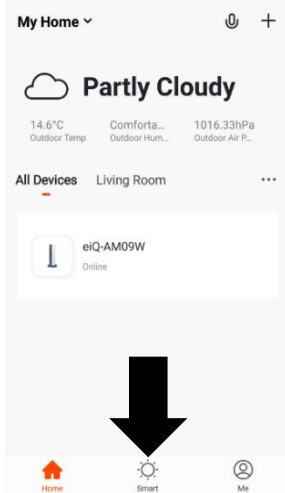

 2. Press on the Automation tab at the top of the screen.

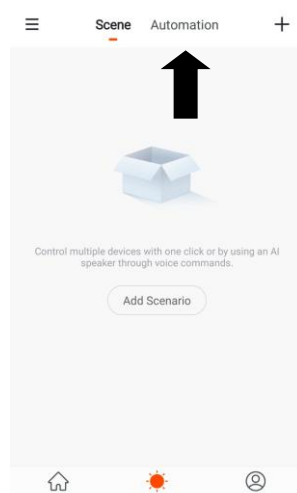

  3. Press on the + at the top of the screen or press on Add Automatic Action.

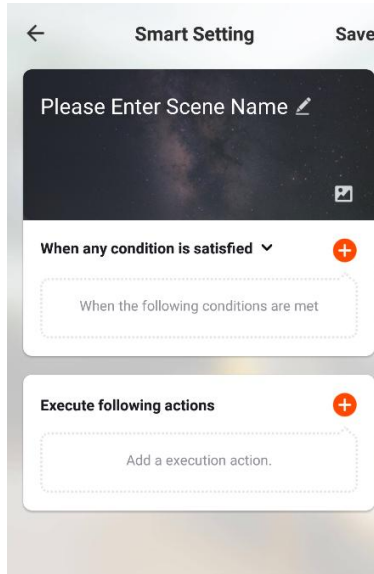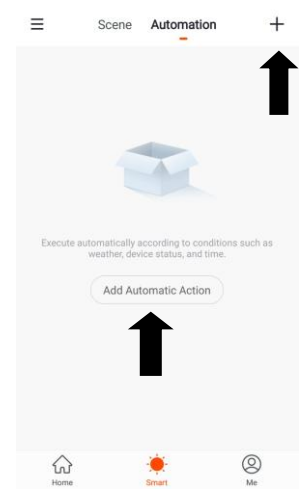


4. Setup is very similar to the scene setup on the previous page, and includes an extra section for specifying a trigger for the scene to start.

Press the Pen next to “Please Enter Scene Name” to input the name for your Scene


Press the Red Plus next to “When any condition is satisfied” to add the trigger

Press the Red Plus next to “Execute following actions” to add the action required. Then select the heater from the list of devices.

 5. Select the condition when the automation should start. A number of triggers can be combined.

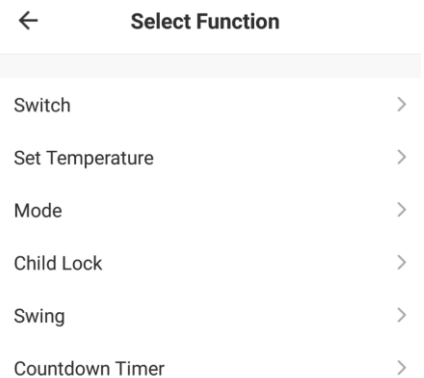

 6. Chose the function, set the value for the function, and then press the back button in the top right corner, to return to the previous screen.

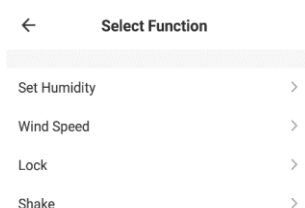

7. Once all the functions required have been added, press the Save button in the top right corner to finalize and save your new scene.

The automation is now set up; it can be turned on and off using the toggle on the home page.

PROFILE TAB



The profile tab gives you the option to edit both your detail, and use the added features of the unit.



Click here to set ni... >



Home Management >



Message Center >



Help Center >



More Services >



Settings >



Home



Smart



Me

HOME MANAGEMENT

Home Management provides options for managing your TUYA account, giving options such as adding a home, adding and removing rooms, and sharing devices with family.

MESSAGE CENTRE

View notifications from devices if alarms are set up (dependent on the device).

HELP CENTRE

Provides assistance using the features provided within the app.

MORE SERVICES

This allows the unit to be integrated with your favourite home automation hardware, such as Google Home and the Amazon Echo.

CONNECTION TROUBLESHOOTING

1. Check whether the device is powered on and is in the correct Wi-Fi connection mode; if not, please refer to the CHANGING BETWEEN CONNECTION MODES section.
2. Ensure the Wi-Fi password has been entered into the app correctly (Case sensitive)
3. Check that the phone is connected to the Wi-Fi you are connecting the device to.
4. Ensure the network you are connecting it to is 2.4 GHz (5 GHz Wi-Fi networks are not supported) and that there is a strong Wi-Fi signal to the item.
5. If your router is dual band, ensure that the 2.4ghz network has a different network name (SSID). Further advice on changing router settings will be available from your Internet service provider / Router manufacturer.
6. Check the settings on the router. Encryption should be WPA2-PSK, and the authorisation type should be set to AES
7. Try using the alternative connection method. i.e. If connection is failing when attempting to connect through CF mode, try AP mode.

CLEANING AND STORAGE

ATTENTION: Please shut off the unit and unplug it from the mains before cleaning or performing any maintenance.

CLEANING THE SURFACE

- Clean the heater with a duster or a soft, wet cloth.
Please do not use chemical solvents (such as benzene, alcohol or gasoline) as they may cause irreversible damage. Make sure no water enters the control panel or gaps in the casing.
- Do not run the unit until completely dry.
- Place the heater in its original box or cover to protect it from dust when not in use.
- Store it in a cool, dry place.

TECHNICAL SPECIFICATIONS

Model	EAH20LEDWB	EAH20LEDWW	EAH20LEDWDG
Colour	Black	White	Grey
Voltage	220-240 V~		
Frequency	50/60 Hz		
Power	2000 W		
IP Waterproof	IPX0		
Recommended heating area	≤ 15m ²		

TROUBLESHOOTING

Do not repair or disassemble the unit by yourself; unauthorised repair attempts will invalidate the warranty and may cause bodily harm.

Issue	Possible Reason	Solution
No power	1. The appliance is not connected to power, or the plug is loose. 2. There is a power failure or the circuit breaker has tripped. 3. The fuse in the plug has blown.	1. Ensure the appliance is properly connected and the plug is securely inserted. 2. Check for any power outage and reset the circuit breaker if necessary. 3. Replace the fuse in the plug with a BS1362 10A fuse.
Odour emission from the unit	1. New unit – a slight odour may occur when first used as the fan motor and internal components heat up.	1. This is normal and will dissipate after several uses. No action required. However, if a strong or persistent burning smell occurs, switch off the appliance, stop using it, and contact our service centre.
Strong vibrations and noise	1. The unit is placed on an uneven surface, causing vibration noise during operation. 2. The unit produces unusual noises such as creaking or ticking, which may indicate internal damage.	1. Place the unit on a stable, flat surface. An anti-vibration mat may be used to reduce noise. 2. Disconnect the unit immediately and stop using it. Contact the service centre immediately.

If the above solutions do not resolve the problem, please contact our service centre.

electriQ UK SUPPORT

www.electriQ.co.uk/support

For your convenience, please make these simple checks before calling the service line. If the unit still fails to operate, call 0330 390 3061 or complete the online form.

Office hours: 9 AM - 5 PM, Monday to Friday

www.electriQ.co.uk
Unit 2A, Trident Business Park,
Neptune Way, Huddersfield,
HD2 1UA



Disposal: Do not dispose of this product as unsorted municipal waste. Collection of such waste must be handled separately as special treatment is necessary.

Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate

when depositing your equipment. Please get in touch with the local council for details of your local household waste recycling centres.

electriQ

PSTI STATEMENT OF COMPLIANCE

Description: Panel Heater

Model Number: EAH20LEDWB, EAH20LEDWW and EAH20LEDWDG

Manufacturer: electriQ, 2A Trident Business Park, Leeds Road, Huddersfield, HD2 1UA

PSTI Contact: TiSecurity@buyitdirect.co.uk

We have prepared this statement of compliance and can confirm that this product is compliant with the deemed compliance conditions in Schedule 2 of The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023.

Duration of security updates: 21/08/2030. This date is correct at the time of printing, but we may extend it. Please visit www.electriQ.co.uk for the latest information and details of our PSTI compliance.



Richard Leach

Compliance and Quality Manager, Buy It Direct, Huddersfield

27th October 2025

EU DECLARATION OF CONFORMITY

Hereby, electriQ declares that these air conditioners are in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet addresses:

<https://www.electriq.co.uk/content/DOC/EU/EAH20LEDWB.pdf>

<https://www.electriq.co.uk/content/DOC/EU/EAH20LEDWW.pdf>

<https://www.electriq.co.uk/content/DOC/EU/EAH20LEDWDG.pdf>

UK DECLARATION OF CONFORMITY

Hereby, electriQ declares that these air conditioners are in compliance with Radio Equipment Regulations 2017. The full text of the UK declaration of conformity is available at the following internet addresses:

<https://www.electriq.co.uk/content/DOC/UK/EAH20LEDWB.pdf>

<https://www.electriq.co.uk/content/DOC/UK/EAH20LEDWW.pdf>

<https://www.electriq.co.uk/content/DOC/UK/EAH20LEDWDG.pdf>

PRODUCT FICHE

Model Identifier: EAH20LEDWB EAH20LEDWW EAH20LEDWDG							
Item		Symbol	Value	Unit	Item		Unit
Heat Output					Type of heat input, for electric storage local space heaters only (select one)		
Nominal heat output	P _{nom}	2.0	kW		manual heat charge control, with integrated thermostat		No
Minimal heat output	P _{min}	2.0	kW		manual heat charge control with room and/or outdoor temperature feedback		No
Maximum continuous heat output	P _{max}	2.0	kW		electronic heat charge control with room and/or outdoor temperature feedback		No
Power consumption					fan assisted heat output		No
In off mode	P _o	0.0	W		Type of heat output/room temperature control (select one)		
In standby mode	P _{sm}	0.29	W		single stage heat output and no room temperature control		No
In idle mode	P _{idle}	0.39	W		two or more manual stages, no room temperature control		No
In network standby	P _{nsm}	0.67	W		with mechanical thermostat room temperature control		No
Standby mode with display of information or status				Yes	with electronic room temperature control		No
Seasonal space heating energy in active mode (portable)	N _{s,on}	95	%		with electronic room temperature control plus day timer		No
Seasonal space heating energy in active mode (fixed)	N _{s,on}	94	%		with electronic room temperature control plus week timer		Yes
					Other control options (multiple selections possible)		
					room temperature control with presence detection		No
					room temperature control, with open window detection		Yes
					with distance control option		Yes
					with adaptive start control		No
					with working time limitation		Yes
					with black bulb sensor		No
					with self-learning functionality		No
					With control accuracy		No
Contact Details	electriQ, Unit 2A, Trident Business Park, Neptune Way, Huddersfield, HD2 1UA Buy It Direct, The Black Church, St Mary’s Place, Dublin 7						