




FOOD PROCESSOR

USER MANUAL

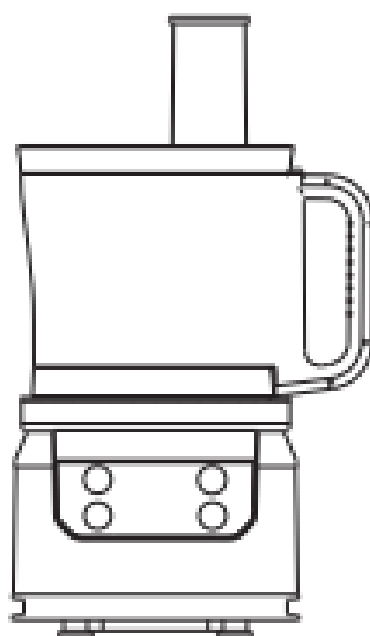

EIQFPPREM

Thank you for choosing electriQ.

Please read this user manual before using this Food Processor and keep it safe for future reference.

Visit our page www.electriq.co.uk for our entire range of electricals

IMPORTANT SAFETY INSTRUCTIONS

Danger

- Never immerse the motor unit in water or any other liquid, nor rinse it under the tap.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Never connect this appliance to a timer switch in order to avoid a hazardous situation.
- Do not use the appliance if the mains cord, the plug or other parts are damaged.
- If the mains cord is damaged, you must have it replaced by supplier, a service centre authorised by Supplier or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never let the appliance run unattended.
- Never use your fingers or an object (e.g. a spatula) to push ingredients down the feeding tube while the appliance is running.
- Be very careful when you handle the discs, blender blade unit or food processor blade unit. Be especially careful when you remove them from the food processor bowl or blender jar, when you empty the bowl or jar and when you clean them. Their cutting edges are very sharp.

Caution

- Never switch off the appliance by turning the blender jar or the food processor bowl. Always switch off the appliance by turning the speed control knob to OFF.
- Switch off the appliance before you detach any accessory.
- Unplug the appliance immediately after use.
- Always unplug the appliance before you reach into the blender jar with your fingers or an object (e.g. a spatula).
- Wait until moving parts stop running before you remove the lid of the bowls or jar.
- Never use any accessories or parts from other manufacturers or that supplier does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

- Do not exceed the maximum content indicated on the food processor bowl or the blender jar.
- Thoroughly clean the parts that come into contact with food before you use the appliance for the first time.
- Let hot ingredients cool down before you process them (max. temperature 80°C/175°F).


Built-in safety lock

This feature ensures that you can only switch on the appliance if you have assembled the blender jar with blade unit, the food processor bowl with coupling unit on the motor unit. If the blender jar has the blade unit attached or the food processor bowl is assembled correctly, i.e. when it has been turned in the direction of the 'locked' symbol as far as possible ('click'), the built-in safety lock will be unlocked.

Technical Data

Product name	Model No.	Voltage	Frequency	Power	Capacity
Food processor	EIQFPPREM	220-240V~	50/60Hz	800W	1500ml

General Description

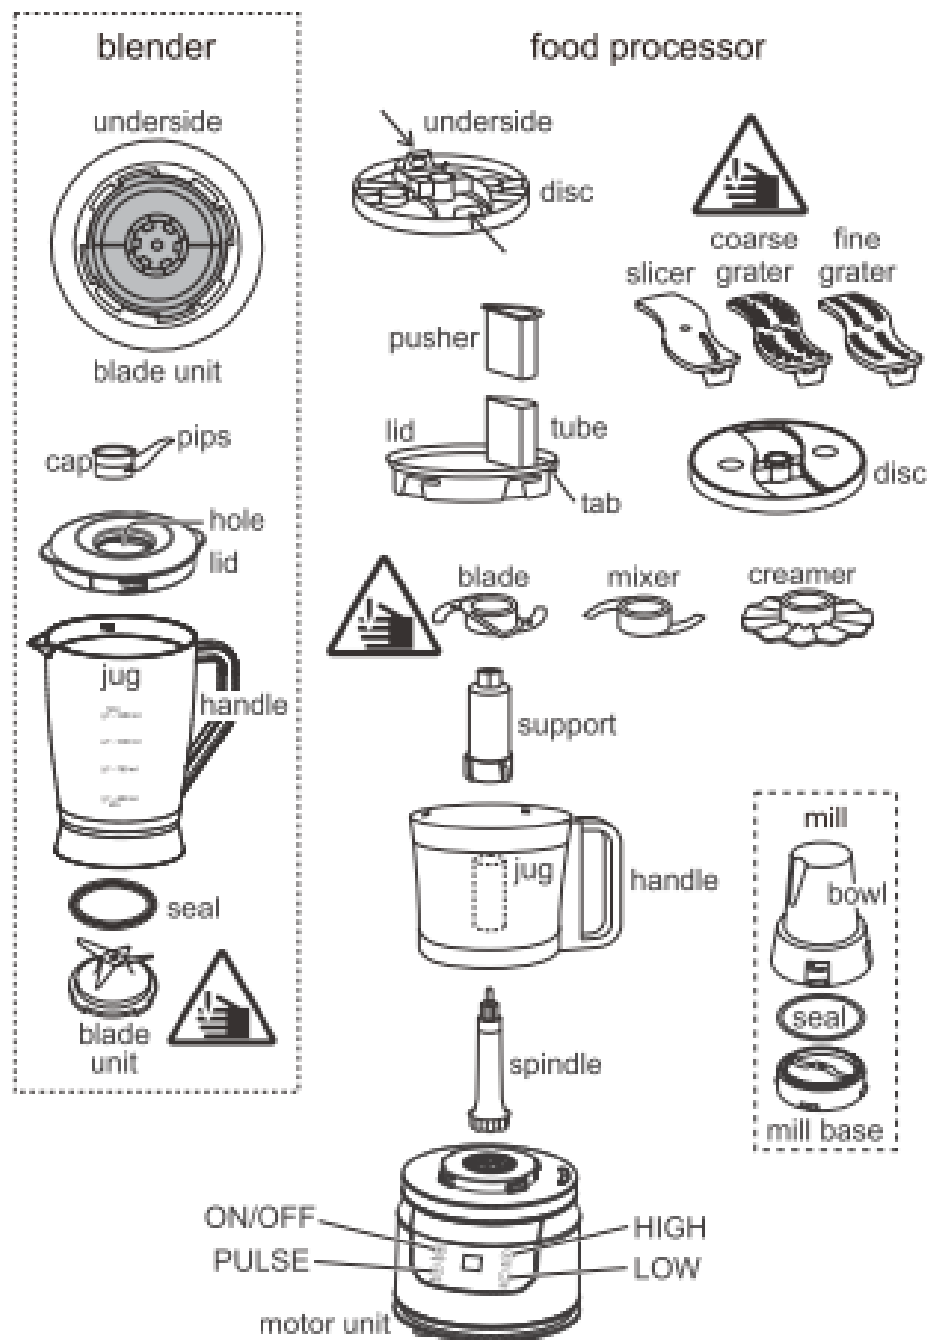

In Brief

- Sit the motor unit on a dry, firm, level surface.
- Route the cable so it doesn't overhang, and won't trip or catch.
- Lower the jug on to the motor unit, then turn the jug clockwise, to lock it in place.
- Remove the lid.

- Put the ingredients into the jug, don't fill past the max mark.
- Put the lid on the jug.

Power Up

- Check that the speed control is set to 0.
- Put the plug into the power socket.

Speed Control

- Press the speed control button for low speed, high speed.
Then press the on/off button.
- Press the on/off button, then the motor off.
- Use low speed (1) for lighter applications, using mainly liquid ingredients, and high speed (2) for heavier applications, using mainly solid ingredients.
- Pressing the pulse button will give you a short burst at high speed, for more precise control.

Using the Blender

- Lower the jug on to the motor unit, then turn the jug clockwise, to lock it in place.
- Pull the lid up and off the jug – it's stiff, because of the seal.
- Put the ingredients into the jug - don't fill past the max mark.
- Put the lid on the jug, and push it down to seat it.
- Align the pips on the cap with the slots in the hole, fit the cap in the hole, and turn clockwise.
Don't run the blender without the cap.
- To add ingredients while the motor is running:
 - a) turn the cap clockwise to unlock it, and lift it off
 - b) add the ingredients via the hole
 - c) replace the cap and turn it anti-clockwise to lock it
- Turn the jug anti-clockwise to unlock, and lift it off the motor unit.

Crushing Ice

- Start with three quarters of a cup of ice, or 4 to 6 cubes, and add 15ml (1 tbsp) of water.
- Put the lid on the blender, then press the pulse button for a second or so, check the state of the ice, and repeat till the ice is the consistency that you need.

Care and Maintenance

- Switch off and unplug before cleaning.
- Wipe the outside of the motor unit with a clean damp cloth.
- Hand wash the removable parts.
- If you use a dishwasher, the harsh environment inside the dishwasher will affect the surface finishes.

- The damage should be cosmetic only, and should not affect the operation of the appliance.

Blade Unit

- You should remove the blade unit for cleaning.
- This is best done with the jug upside down.
- Grip the jug handle with one hand.
- Grip the bottom of the blade unit with the other hand.
- Turn the blade unit clockwise until it comes loose from the jug base.
- Carefully, pull it up and out of the bottom of the jug.
- Wash the seal and blade unit in warm soapy water, rinse, and air dry.
- Take great care with the blades – don't handle them directly, use a nylon washing-up brush.
- Replace the seal round the blade unit.
- Turn the blade unit upside down, and replace it in the bottom of the jug base.
- Turn the blade unit anti-clockwise to tighten it.

Using the Processor

- Unplug the appliance.
- Fit the spindle to the top of the motor unit.
- Lower the jug on the motor unit, then turn the jug clockwise, to lock it in place.
- Choose the attachment you need.

With the Support

- Use the chopper for pulverizing ingredients.
- Use the mixer to mix ingredients together.
- Use the creamer to thicken cream, to beat eggs, and to cream eggs and sugar together.
- Fit the attachment over the support, and slide it to the bottom.
- Lower the support into center of the jug, over the spindle.
- Put the ingredients into the jug – don't fill it past the max mark.
- Hold the lid with the tube slightly behind the jug handle, set it on the jug, then turn it clockwise, to lock the tab into the top of the handle.
- To add ingredients while the motor is running:
 - a) lift out the feeder tube pusher
 - b) add the ingredients via the tube
 - c) replace the pusher
- To remove the lid, turn it anti-clockwise to unlock it, then lift it off.

With the Disc

- Fit the slicer or one of the grates into the disc.
- Lower the disc over the top of the spindle.
- Hold the lid with the tube slightly behind the jug handle, set it on the jug, then turn it clockwise,

to lock the tab into the top of the handle.

- Remove the pusher, and drop the ingredients down the tube.
- Replace the pusher, and use it to push the ingredients gently down the tube.
Don't use fingers or cutlery to push food down the tube – only the pusher.
- The blades on top of the disc will slice or grate the food into the bowl.
- Don't let the bowl get more than about half full.
- To remove the lid, turn it anti-clockwise to unlock it, then lift it off.
- Turn the disc over and press one of the metal ends in and down, to remove the slicer/grater.

Care and Maintenance

- Switch off and unplug before cleaning.
- Wipe the outside of the motor unit with clean damp cloth.
- Handwash the removable parts.
- If you use a dishwasher, the harsh environment inside the dishwasher will affect the surface finish. Don't put any part of the appliance in a dishwasher.
- The damage should be cosmetic only, and should not affect the operation of the appliance.

Using the Mill

- Unplug the appliance.
- Turn the mill upside down.
- Turn the mill base clockwise, to release it, and lift it out of the mill.
- Put the goods to be ground into the bowl. Dry goods only.
For best results, don't fill it more than one third full.
- Replace the mill base, inside the mill, and turn it anti-clockwise, to lock it in place.
- Turn the mill right way up.
- Lower the mill onto the motor unit, then turn it clockwise, to lock it in place.
- Use the pulse function in short bursts until you achieve the size of grind you want.
- Wait until the blades stop moving.
- Turn the mill anti-clockwise to unlock it, and lift it off the motor unit.
- Turn the mill upside down.
- Tap the mill a couple of times to move all the grounds into the bowl.
- Turn the mill base clockwise, to release it, and lift it out of the mill.
- Empty the bowl.

Care and Maintenance

- Switch off and unplug before cleaning.
- Wipe the outside of the motor and the mill base with a damp cloth.
- Handwash the bowl and seal.
- If you use a dishwasher, the harsh environment inside the dishwasher will affect the surface finished. Don't put any part of the appliance in a dishwasher.
- The damage should be cosmetic only, and should not affect the operation of the appliance.

electriQ UK SUPPORT

www.electriQ.co.uk/support

Complete online support form on www.electriQ.co.uk/support

Service Line: 0871 620 1060

Office hours: 9AM - 5PM Monday to Friday

www.electriQ.co.uk

Unit 2, The Nursery

Berristow Lane South Normanton

Derbyshire, DE55 2FX



Disposal: Do not dispose this product as unsorted municipal waste. Collection of such waste must be handled separately as special treatment is necessary.

Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity

sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centers.